

Filter guard



The factory settings include a filter guard that emits a signal to indicate that a filter needs to be changed after a certain time. This can be replaced with a pressure guard that is fitted in the ventilation unit and then connected between terminal blocks **P6-3 and P6-6**. If the contact is closed, the input is activated. To activate the function, go to the 'Advanced user/Configuration/Sensors/Filter guard' menu and switch the sensor ON.

