



Adjusting Multibox III:
 Quickguide - also see manual
 P0: Version selector - select 530 (most common)
 P1: Adjustment set point [Pa]
 P2: Min. Alarm limits [s] at too low pressure
 P3: Max. Alarm limit [s] at too high pressure
 P10: Shows current pressure.

OBS - IMPORTANT - ACS 150
 Jumper on the bottom (S1) must be switched from "I" to "U" This will change output from current to voltage.
 Remember to bridge GND and COM.

Adjusting frequency inverter:
 See manual - important parameters to adjust:
Motordata: Typically parameter group 99
Ramp up/down: Typically parameter group 22
Frequency Max/Min: Typically parameter group 20 and 11